

# User Manual

## DL131 Series LED Downlight

### Downlight with external driver(Trim)

**1 2** Select preferred colour temperature for product in CCT change function only. Cutout (refer to cutout table)

**3 4** To prevent any potential hazards, it is crucial that the external flexible cable or cord of this luminaire is replaced exclusively by the manufacturer, their authorized service agent, or a similarly qualified individual in the event of any damage.

**3 4** COMPLETE

It is imperative that the light source within this luminaire is replaced solely by the manufacturer, their authorized service representative, or an appropriately qualified individual.

**4-1 4-2** COMPLETE

Adjust according to installation requirements


COMPLETE

L — Live  
N — Neutral

### WARNING



1. Switch off power supply before installation / maintenance.
2. Switch on after completing installation and examination of the circuit.
3. The Panel Light must be installed and maintained by professional electrician.

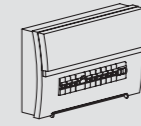

Before beginning any installation, turn off the power supply. To finish the installation correctly, read the instructions and make sure you have all the necessary tools and accessories.

### Downlight with external driver(Trimless)

**1 2** Select preferred colour temperature for product in CCT change function only. Cutout (refer to cutout table)

**3 4** To prevent any potential hazards, it is crucial that the external flexible cable or cord of this luminaire is replaced exclusively by the manufacturer, their authorized service agent, or a similarly qualified individual in the event of any damage.

**3 4** COMPLETE

It is imperative that the light source within this luminaire is replaced solely by the manufacturer, their authorized service representative, or an appropriately qualified individual.

**5 6** COMPLETE

Adjust according to installation requirements

COMPLETE

L — Live  
N — Neutral