

User Manual

Artco Series

Lamp DIY Instruction (Dis)assembly reference Standard DALI/0-10V L=Switched ⊕=Earth N=Neutral Select preferred colour temperature ⊕=Earth DA/L for product in CCT DA/N change function only


WARNING M


- 1. Switch off the power before starting installation or maintenance.
- 2. Turn on only after the installation and examination of the circuit are complete.
- 3. The light must be installed and maintained by professional electrician.






Ensure that the power supply is turned off prior to beginning any installation. Review the instructions and verify that you possess all necessary tools and accessories to complete the installation accurately.

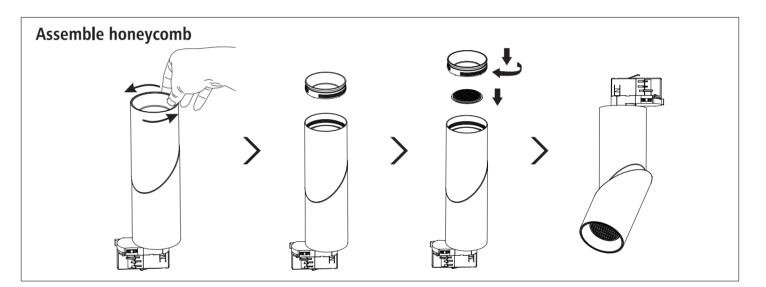


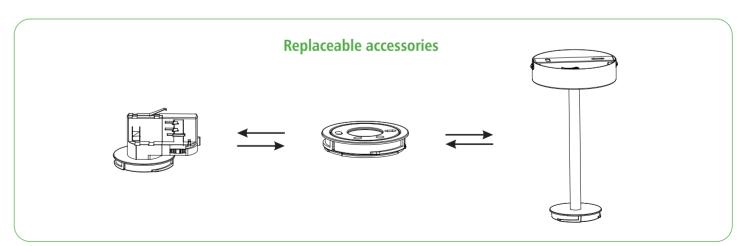

Track Installation

  Select corresponding adapter before installation






4-wires, 3-circuit


6-wires, 3-circuit

Wiring Diagram

 4-wires, 3-circuit




 3-phase, 3-circuit, 230/400V AC, 16A, 3x3.7kVA L1=L2=L3 : I = max. 16A



3-phase, 3-circuit, 230/400V AC,

 6-wires, 3-circuit (DALI)





3-phase, 3-circuit, 230V AC, 16A max

