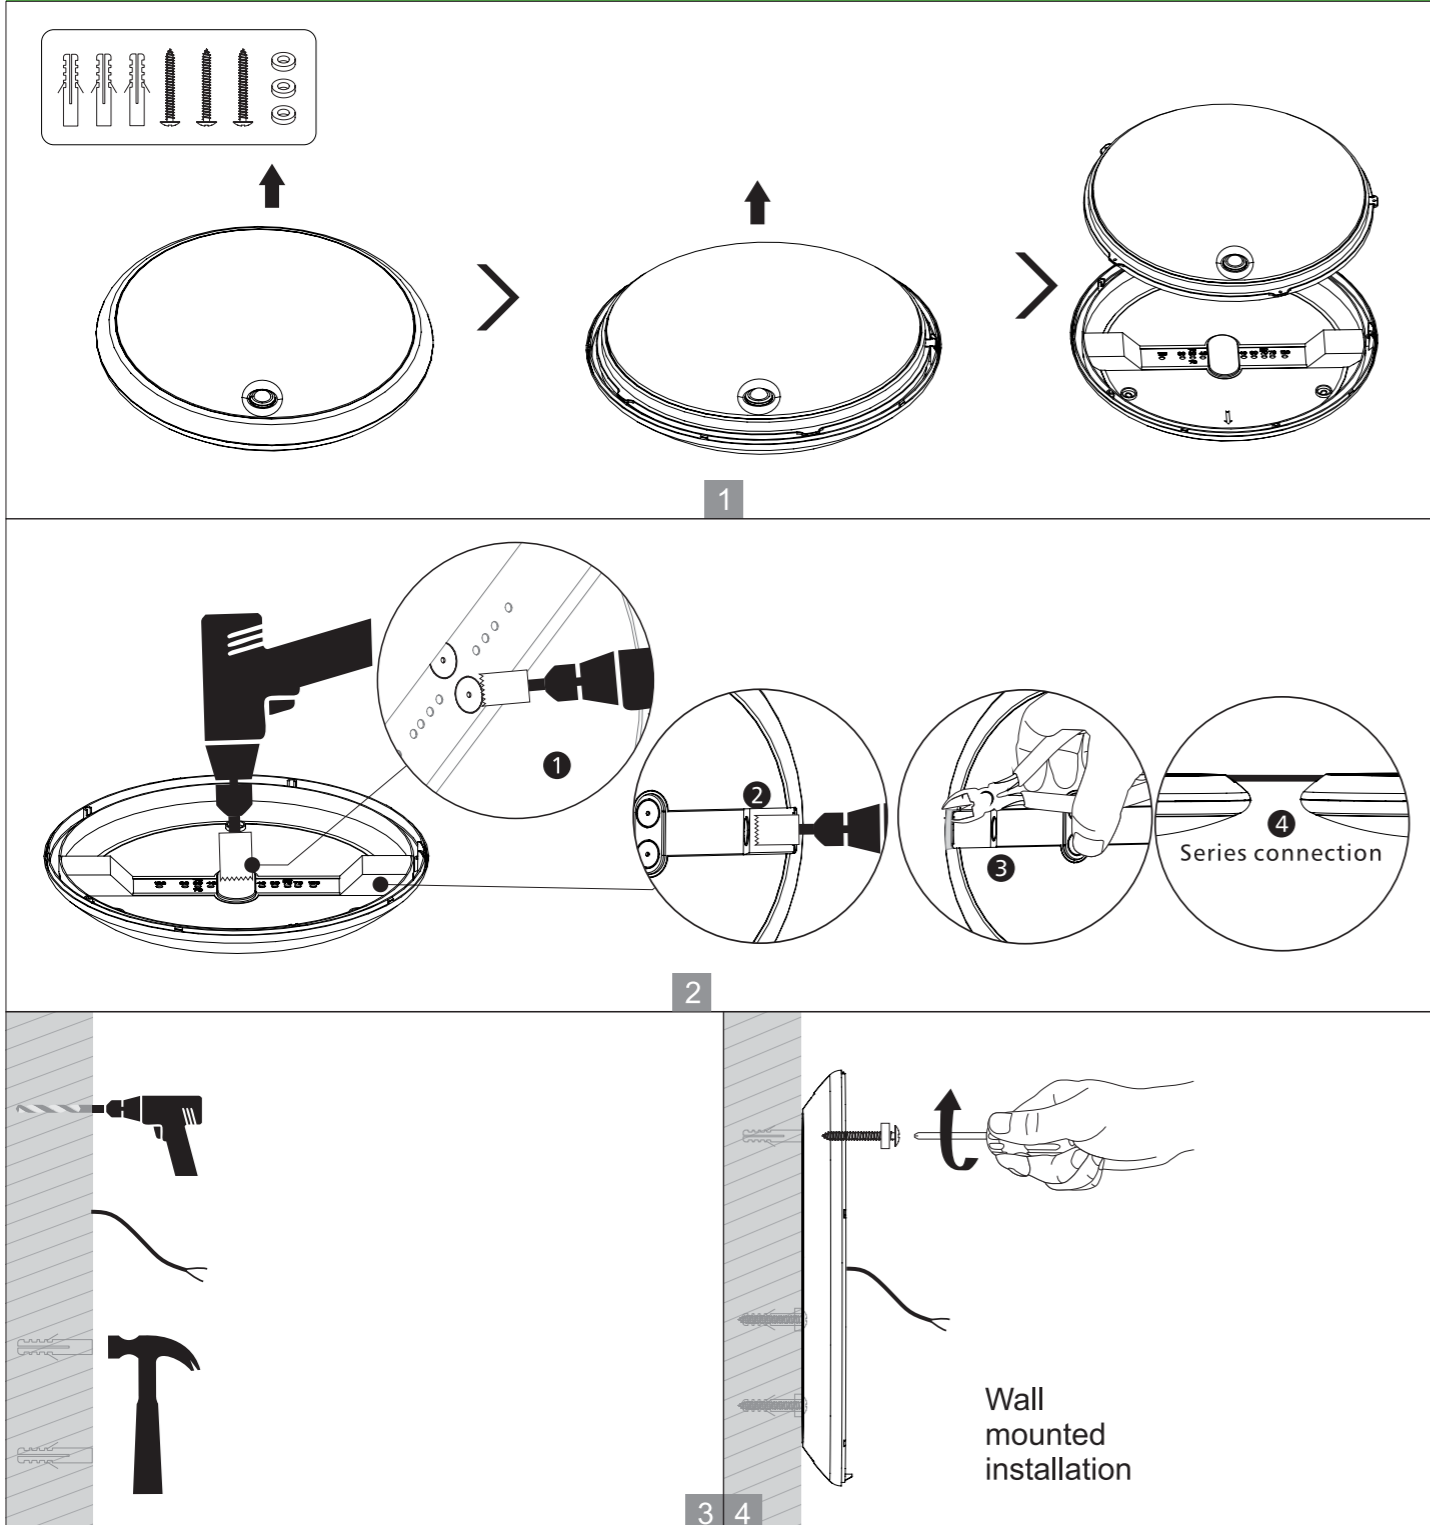# User Manual
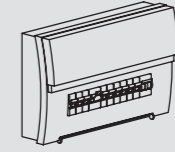## CW178 PIR Sensor Series

WARNING ⚡

1.Switch off power supply before installation / maintenance.

2.Switch on after completing installation and examination of the circuit.

3.The Panel Light must be installed and maintained by professional electrician.

Turn Off Power Supply

Wall mounted installation

1

2

Series connection

3 4

Wall mounted installation

Select preferred colour temperature for product in CCT change function only

Standard

L=Switched
N=Neutral

Wire diameter: 0.5-2.5mm²
Wire stripping length: 8-10mm

5

6

Max twisting force is 15N

7 8

COMPLETE

9-1