




Forte Series LED Linear High Bay Light Installation Instruction








DALI dimming connection diagram



1-10V dimming connection diagram



Ceiling Mounted

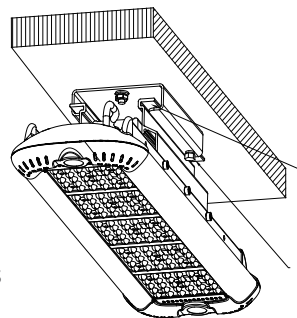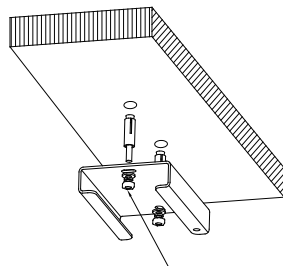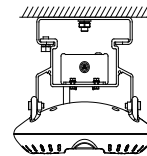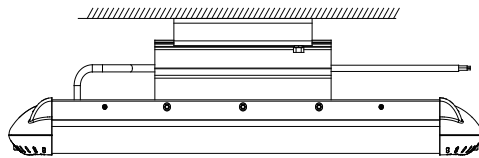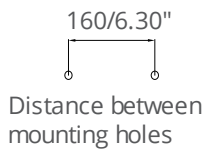



Warning: the lamp can only be installed downward (otherwise IP grade and cooling requirement can't be reached.)

2. After electrical cavity and location hole on the same direction, insert lamp into ceiling installation plate;

3. Use M8 bolt and spring washer to thread location hole of ceiling installation plate, and fasten it.

1. Customer prepare two sets of bolts to fix ceiling installation plate and installing surface, and maximum M10 bolt can be used;

Suspended

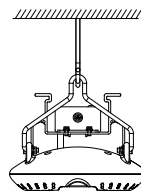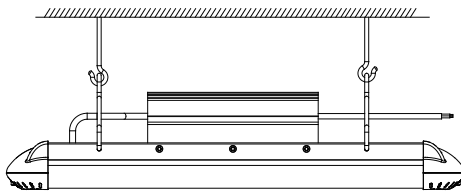

600±20(280W)
23.62±0.79"
500±20(240W)
19.69±0.79"
400±20(200W)
15.75±0.79"
350±20(150W)
13.78±0.79"
300±20(120W)
11.81±0.79"
210±20(90W)
8.27±0.79"

distance between installing hanger

2. Hang the lamp on the hanger of installing surface with hanging bracket;

1. Thread hanging bracket through the reserved holes of radiator, and fasten the bracket with matched M6 nut to fix the lamp with suspending bracket reliably;

